






LEE & PLUMPTON

www.leeandplumpton.co.uk

ASSEMBLY INSTRUCTIONS

RANGE	Galaxy Plus Workstation	
REF:	1200 x 745mm, 1500 x 745mm, 1800 x 745mm	
	 <p>Read this leaflet before assembly</p>	 <p>2 People Required</p>

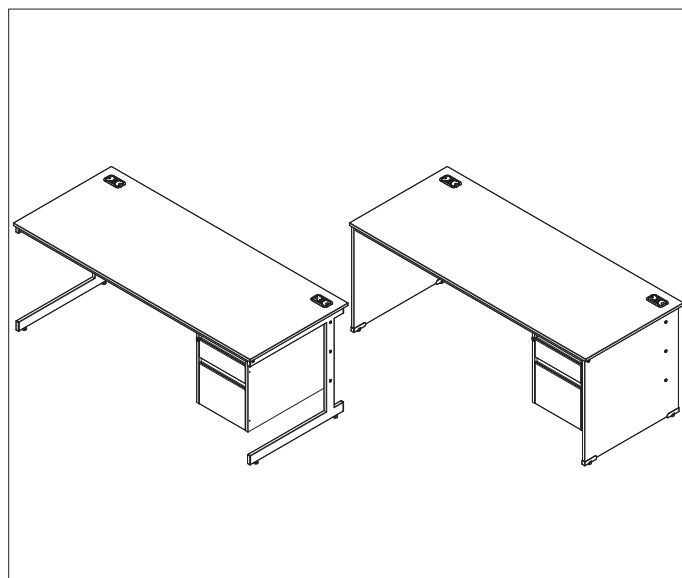

COMPONENT PARTS




Item 1
1200/1500/1800
Top Panel
Qty 1




Item 2
Modesty Panel
Qty 1



Item 3
Crossrail
Qty 1

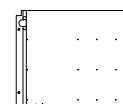


Item 4
0427
Side Panel LH
Qty 1

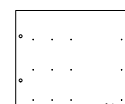


Item 5
0428
Side Panel RH
Qty 1




Item 6
B0121
MDF Base Panel
Qty 1

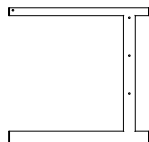


Item 7
GP.750.CANT
Endframe Cantilever
Leg Option
Qty 2

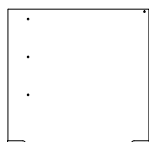

Item 8
GP.750.SLAB
Endframe Slab End
Leg Option
Qty 2



Item 9
F.0410
1 1/2"x8g CSK POZI
BZP
Qty 8



Item 10
F.0403
Spigot For Blum Cam
Qty (See Table 1)




Item 11
F.0401. F.0402.
F.0443. F.0489
Ø25mm Plastic Blum
Cam
Qty 15



Item 12
A.0518. A.0763.
F.0546
Hole Plug 5mm
Qty (See Table 1)




Item 13
F.0426
Minifix Casing Beige
Qty 2




Item 14
F.0417
Minifix Bolt Chipfast
(Galv)
Qty 6



Item 15
F.0431
Wood Dowels 30 x
8mm
Qty 2



Item 16
F.0486
60mm Chipfast Bolt
Zinc
Qty 6



Item 17
F.0488
M6 x 45mm Flat Head
Socket Pozi
Qty 2

COMPONENT PART QUANTITIES FOR UNIT SIZE VARIATIONS (TABLE 1)

ITEM	No Pedestal	Single Pedestal	Double Pedestal
10	3	9	15
12	8	4	0

TOOLS REQUIRED

- Pozi head screwdriver

BEFORE YOU BEGIN...

- Check you have all the tools and components required
- Keep children and animals away from small parts
- Ensure you have adequate space
- Assemble product on a flat, clean surface
- Apply manual handling guidelines when building this item

ASSEMBLY INSTRUCTIONS


STEP 1

Lay the Top Panel (1) flat on a soft surface with the holes facing upwards.

Ensure all holes are free of debris.

Remove the cross rail (3) from its current location and relocate it to the other 3mm pilot holes provided near the front edge.

Attaching the rail using the 8 x 11/2 csk screws (9).

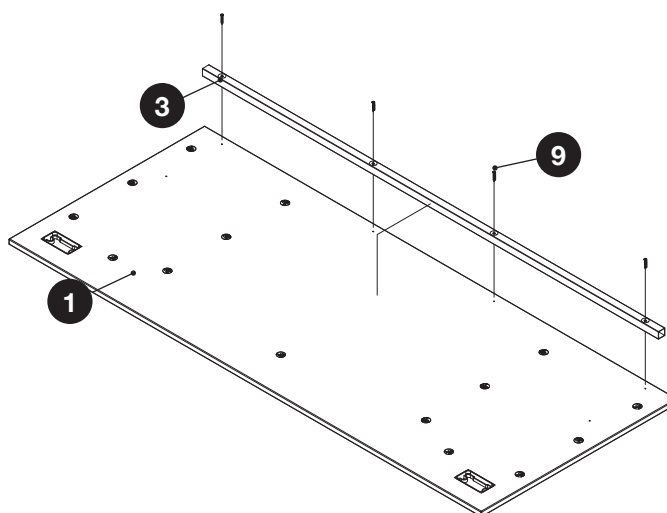


STEP 2

Lay the Side Panels (4 & 5) flat on a soft surface with the holes facing upwards.

Ensure all holes are free of debris.

On each Pedestal Side Panels, screw one Chipfast Bolt (18) into the 5mm hole in the front bottom corner, and knock a dowel (19) into the 8mm holes beside it.

The side panels will arrive with its components (drawer runners & locking bar etc) already assembled, but for simplicity these are not shown here.

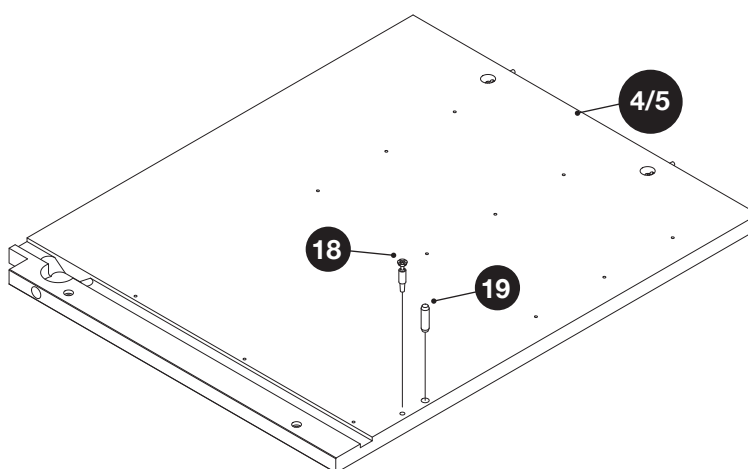


ASSEMBLY INSTRUCTIONS

STEP 3

Place the MDF Rail (6) into position between the two Pedestal side Panels (4 & 5).

Ensure that the arrows moulded into the Cams (17) are pointing towards the edge of the MDF Rail.


Lock the Cams with a half turn.

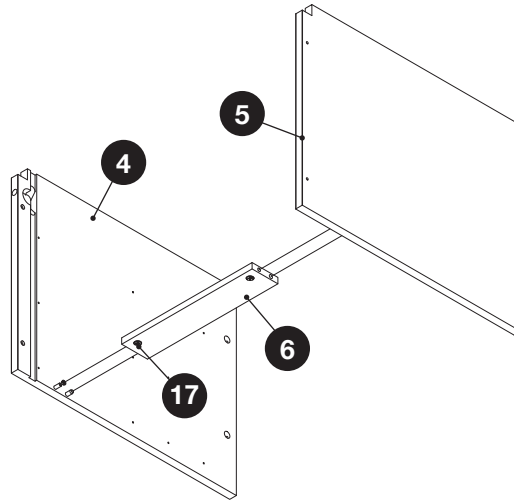

STEP 4

Locate the pedestal sides (4 & 5) via the pre-installed spigots (10) into the cams (11) that are already located in the top panel (1).

For now, tighten up the cams closest to the rail only.

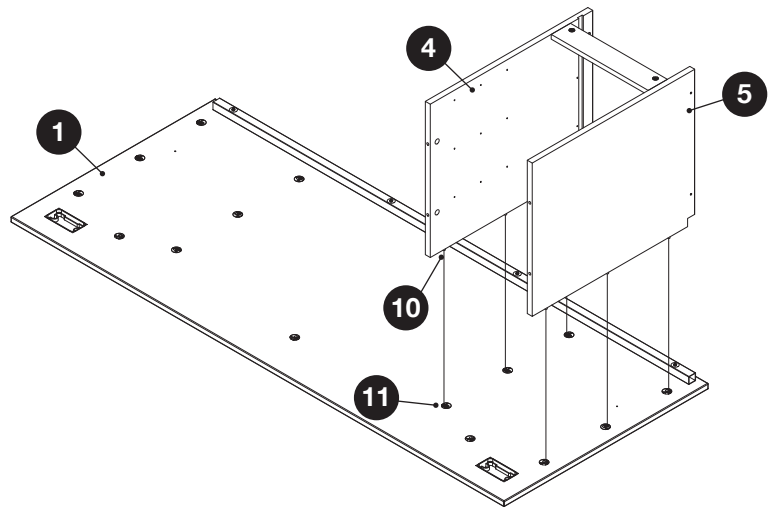


STEP 5

Lay the Large Modesty Panel (2) flat on a soft surface with the holes facing upwards. Ensure all holes are free of debris.

Screw Four Chipfast Bolts (14) into the holes in the Large Modesty Panel.

Modesty Panel holes which will not be used for attaching a Pedestal can be covered using the hole plugs (12) provided.

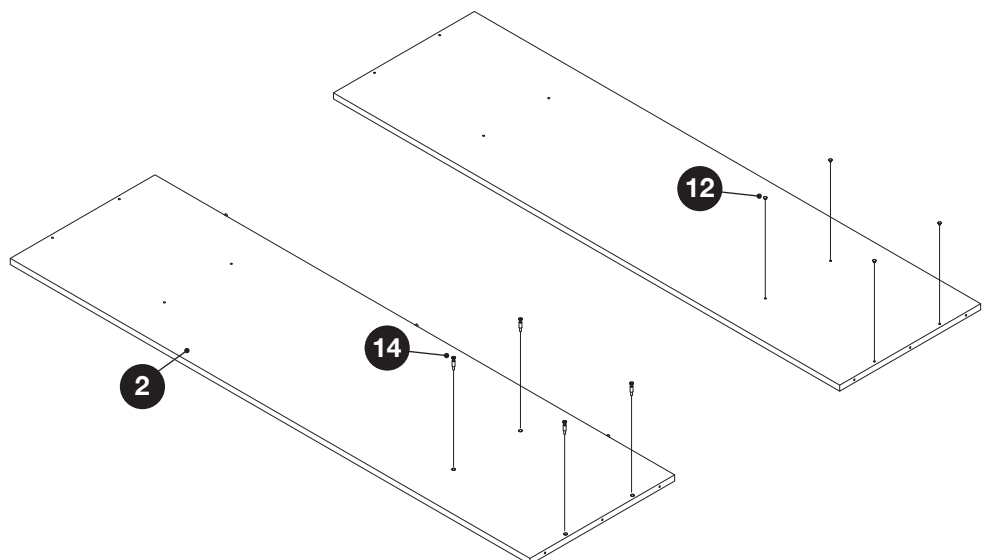


ASSEMBLY INSTRUCTIONS

STEP 7

Place the Spigots (10) which are already assembled in the Modesty Panel (2) into the Cams (11) in the Top Panel (1), behind the Pedestal.

As you do this, slightly lift the back edge of the Pedestal, in order to locate the Chipfast Bolts (14) from the Modesty Panel into the holes for the Minifix Cams (13) in the Pedestal Side Panels (4 & 5). Tighten up all Cams (11) in the Top Panel, and lock the Minifix Cams (13) in the side Panels with a half turn.

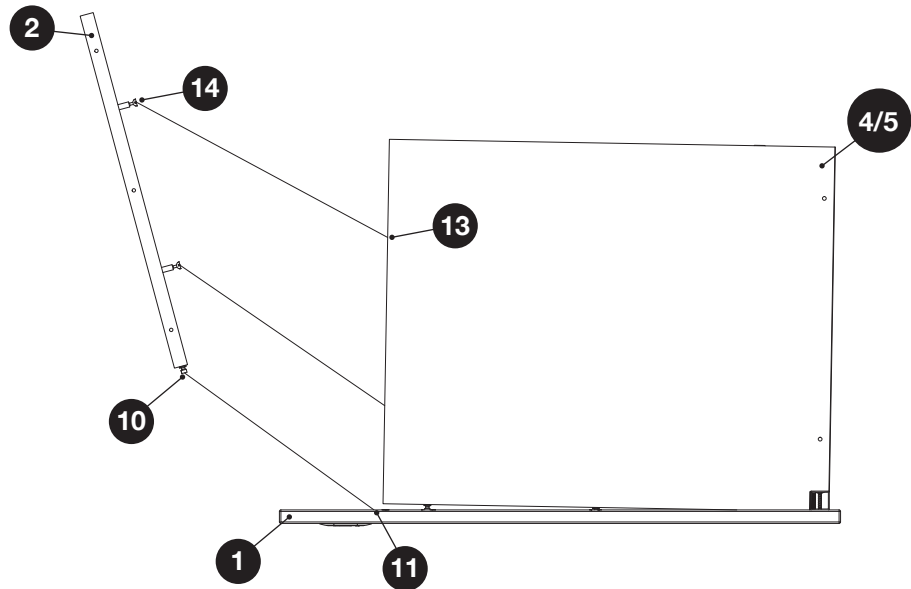

STEP 8


Align the holes in the end frame (7) with the holes in the modesty panel (2) and cross rail (3).

Attach the Three 7mm x 60mm Chipfast Bolts (16) to the Modesty Panel (2) and the One M6 x 60mm bolt (17) to the Cross Rail (3).

Repeat on the other side.

Illustration showing cantilever.


The same fixings are used for a slab end.

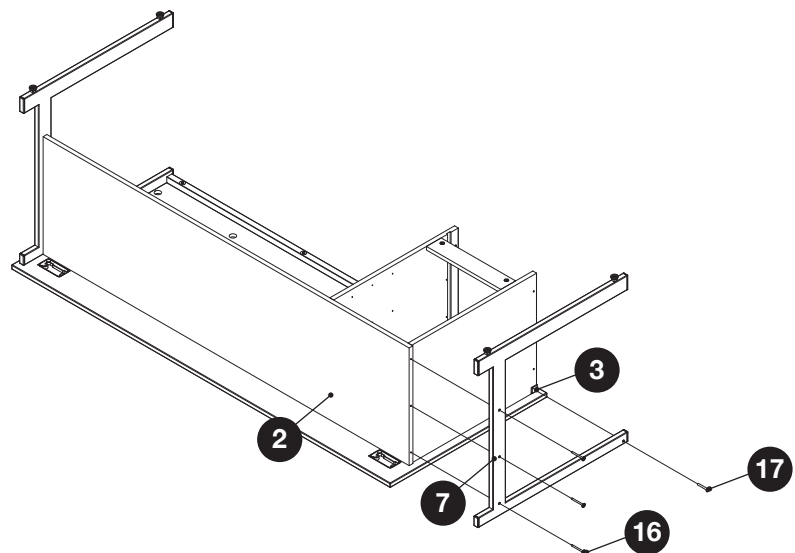

STEP 9

Carefully stand the desk upright. The drawers can now be put in.

The desk can be levelled by adjusting the height of the Feet.

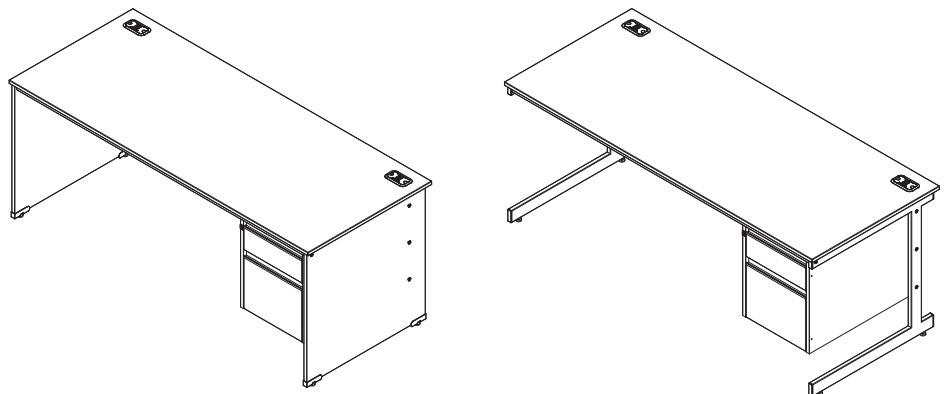

CARE AND MAINTENANCE

Clean using a damp cloth and mild detergent – do not use abrasive cleaners or bleach.