


Satellite Cantilever Workstation/Wave

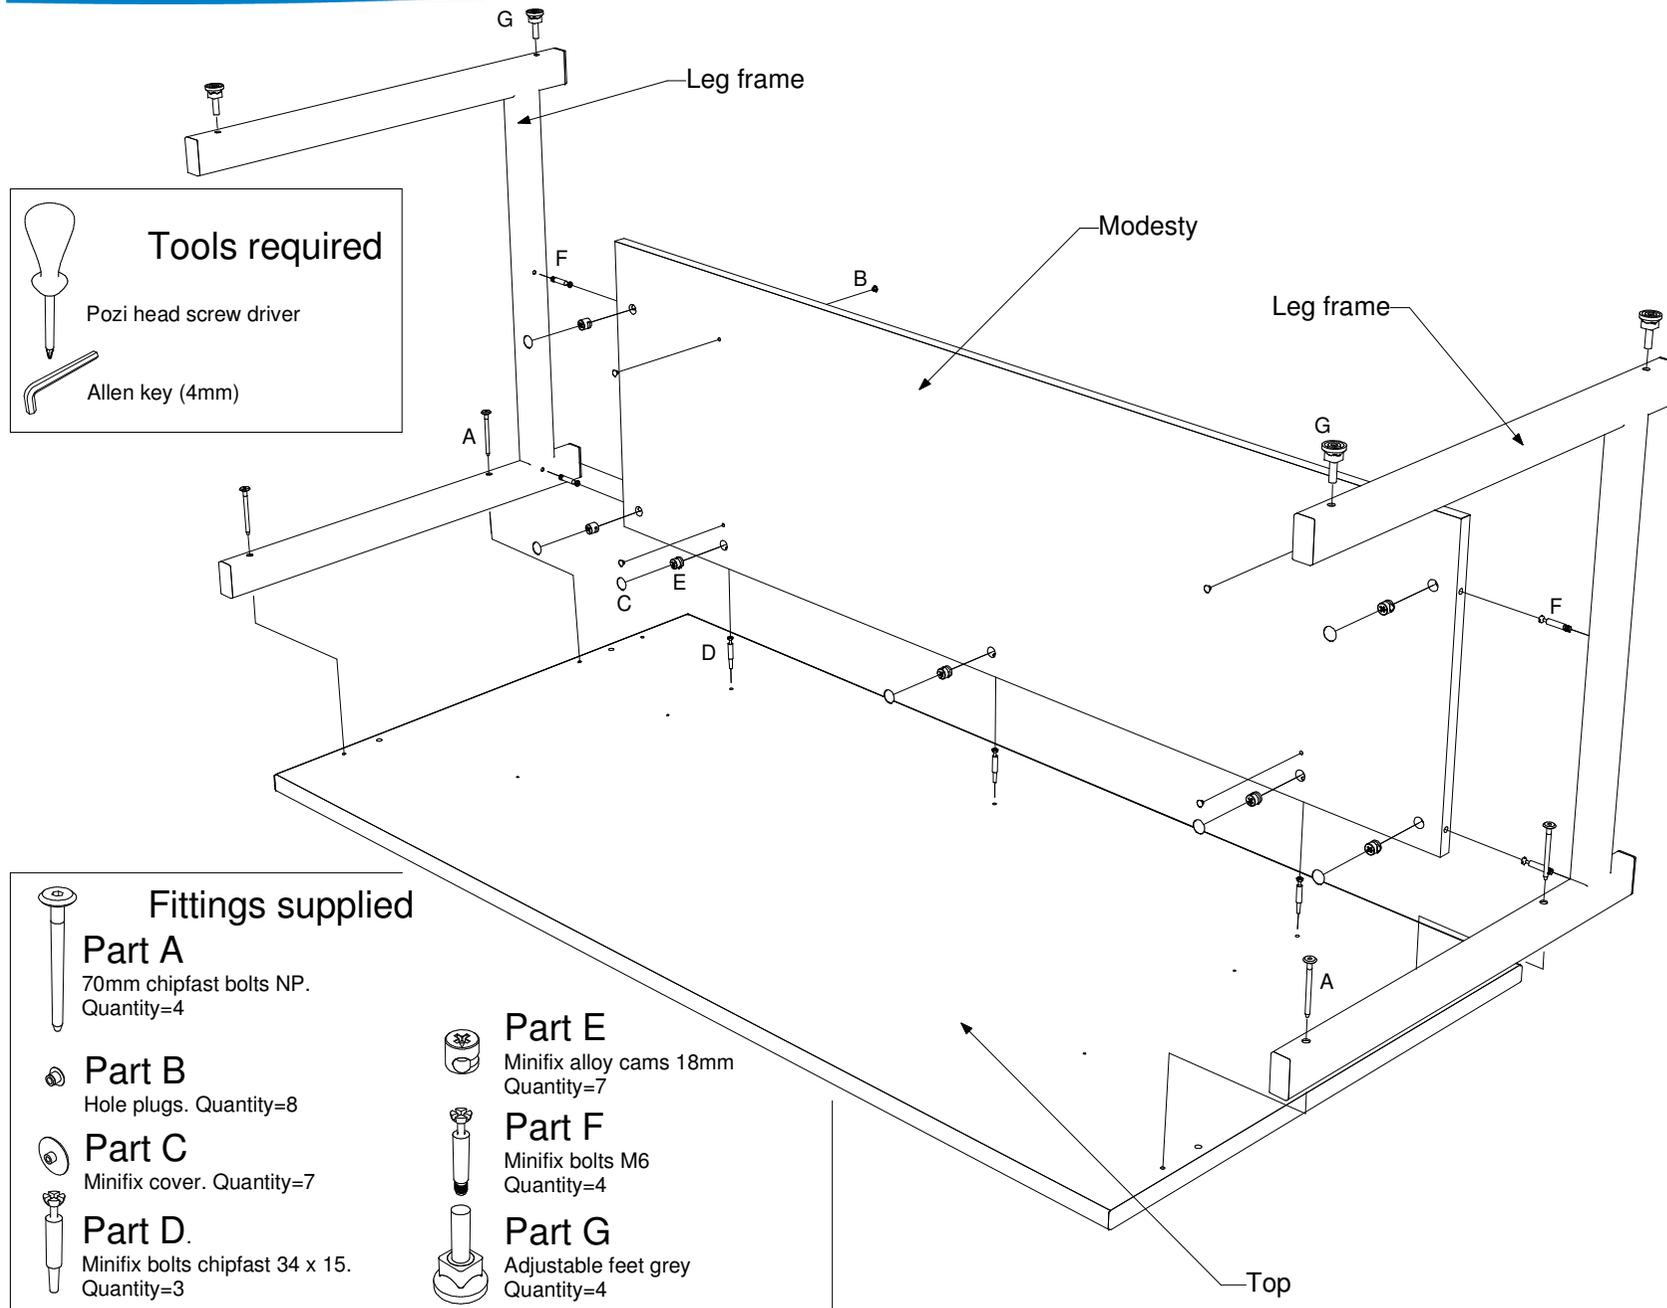

Tools required

- Pozi head screw driver
- Allen key (4mm)


Fittings supplied

- Part A**
70mm chipfast bolts NP.
Quantity=4
- Part B**
Hole plugs. Quantity=8
- Part C**
Minifix cover. Quantity=7
- Part D.**
Minifix bolts chipfast 34 x 15.
Quantity=3
- Part E**
Minifix alloy cams 18mm
Quantity=7
- Part F**
Minifix bolts M6
Quantity=4
- Part G**
Adjustable feet grey
Quantity=4

Assembly steps

1. Unscrew modesty from top and discard screws.
2. Place the top upside down. Screw three of part D to the top.
3. Push seven of part E (with the arrows facing out) into the appropriate holes on the modesty. (First ensuring the holes are free from any debris).
4. Add the modesty to the top and tighten part E (x3).
5. Screw part F (x4) into the uprights on the two leg frames.
6. Fix the leg frames to the desk, locating parts F in the holes on the modesty. Then tighten part E (x4) on the modesty.
7. Screw part A (x4) through the leg frames into the top.
8. Screw part G (x4) into the leg frames.
9. Push parts B and C into the appropriate places to finish the desk.

Satellite Slab Workstation/Wave

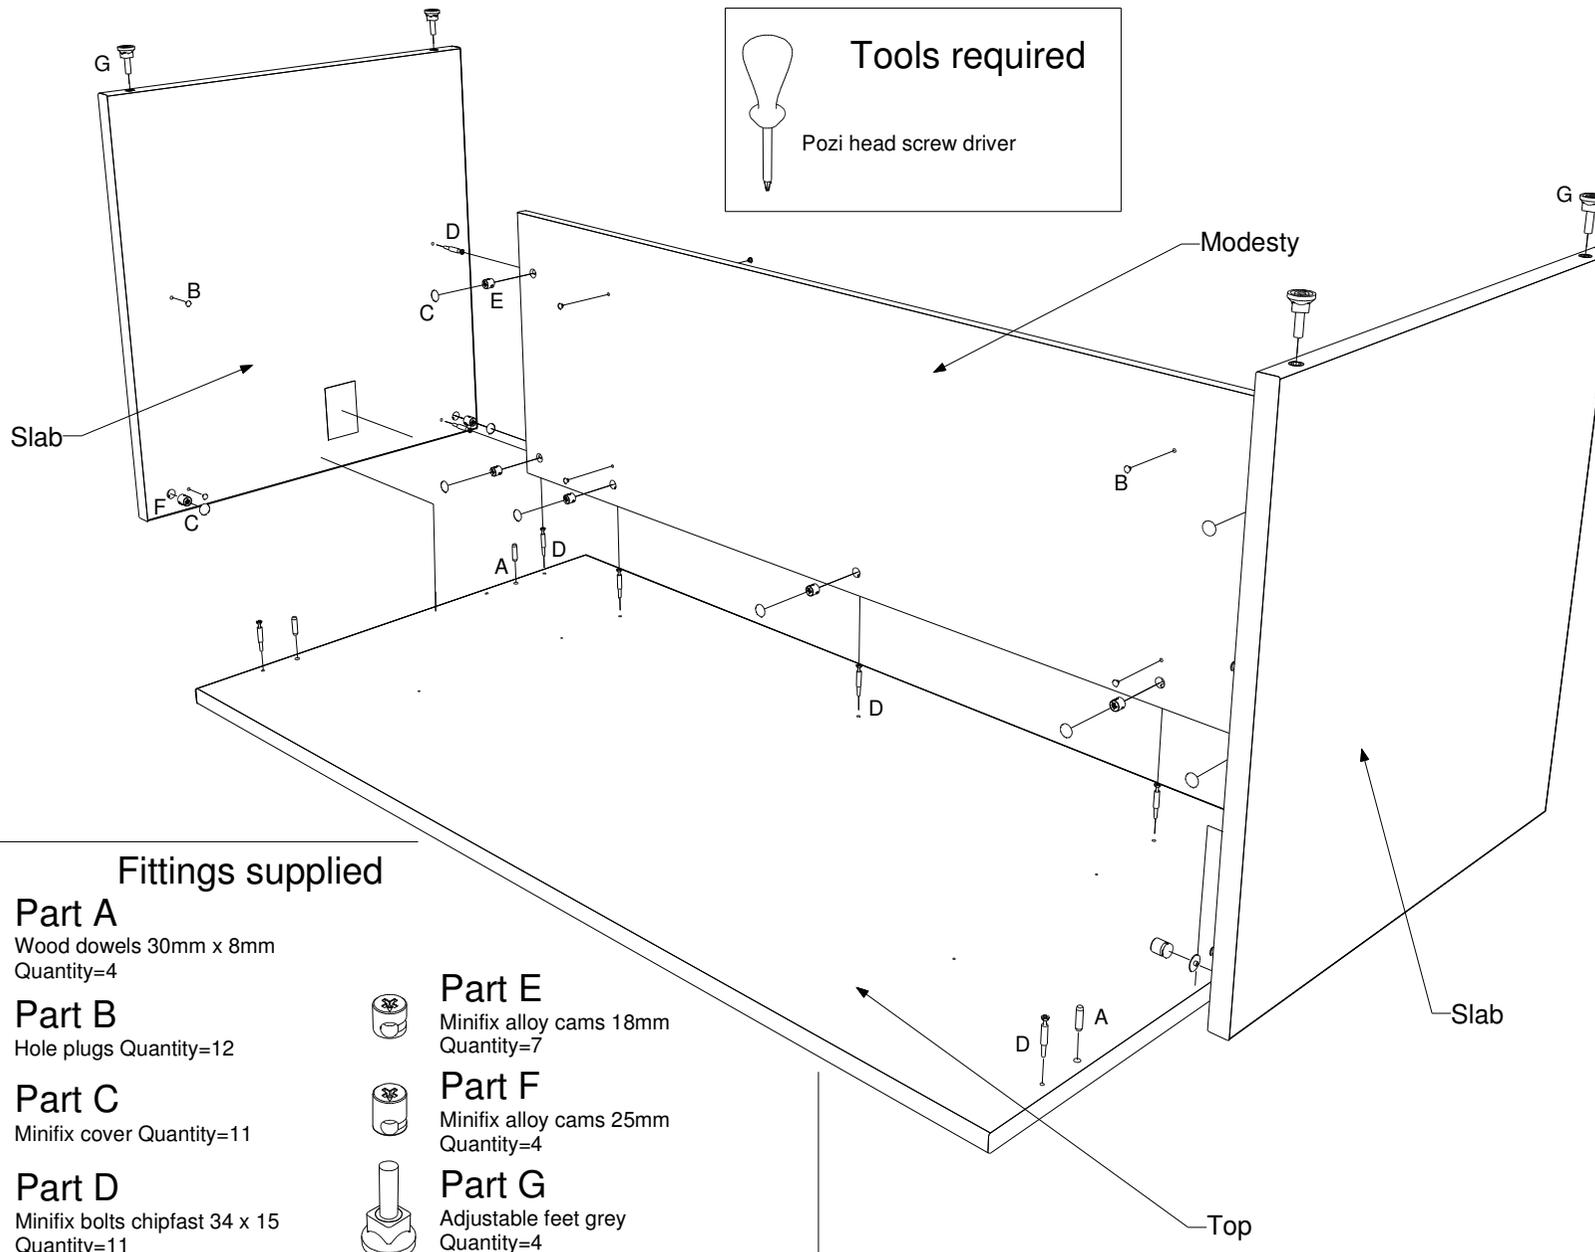

Tools required



Pozi head screw driver

- Fittings supplied**
-  **Part A**
Wood dowels 30mm x 8mm
Quantity=4
 -  **Part B**
Hole plugs Quantity=12
 -  **Part C**
Minifix cover Quantity=11
 -  **Part D**
Minifix bolts chipfast 34 x 15
Quantity=11
 -  **Part E**
Minifix alloy cams 18mm
Quantity=7
 -  **Part F**
Minifix alloy cams 25mm
Quantity=4
 -  **Part G**
Adjustable feet grey
Quantity=4

- Assembly steps**
1. Unscrew modesty from top and discard screws.
 2. Place top upside down. Screw seven of part D and push four of part A in the appropriate holes on the top.
 3. Push seven of part E (with the arrows facing out) into the appropriate holes on the modesty. (first ensuring the holes are free from any debris).
 4. Add the modesty to the top, do not tighten part E (x3).
 5. Screw part D (x4) and push part F (x4) into the appropriate holes on the slabs. (Panels are ambidextrous, be sure to add fittings correctly).
 6. To add a slab to the desk lift the modesty slightly, locate parts D on the slab into the holes on the modesty, then lower both the slab and the modesty onto the fittings on the top. Repeat with other slab.
 7. Tighten all of parts E and F.
 8. Screw the feet (x4) into the slabs.
 9. Push parts B and C into the appropriate places to finish the desk.