


Atmosphere Cantilever Delta

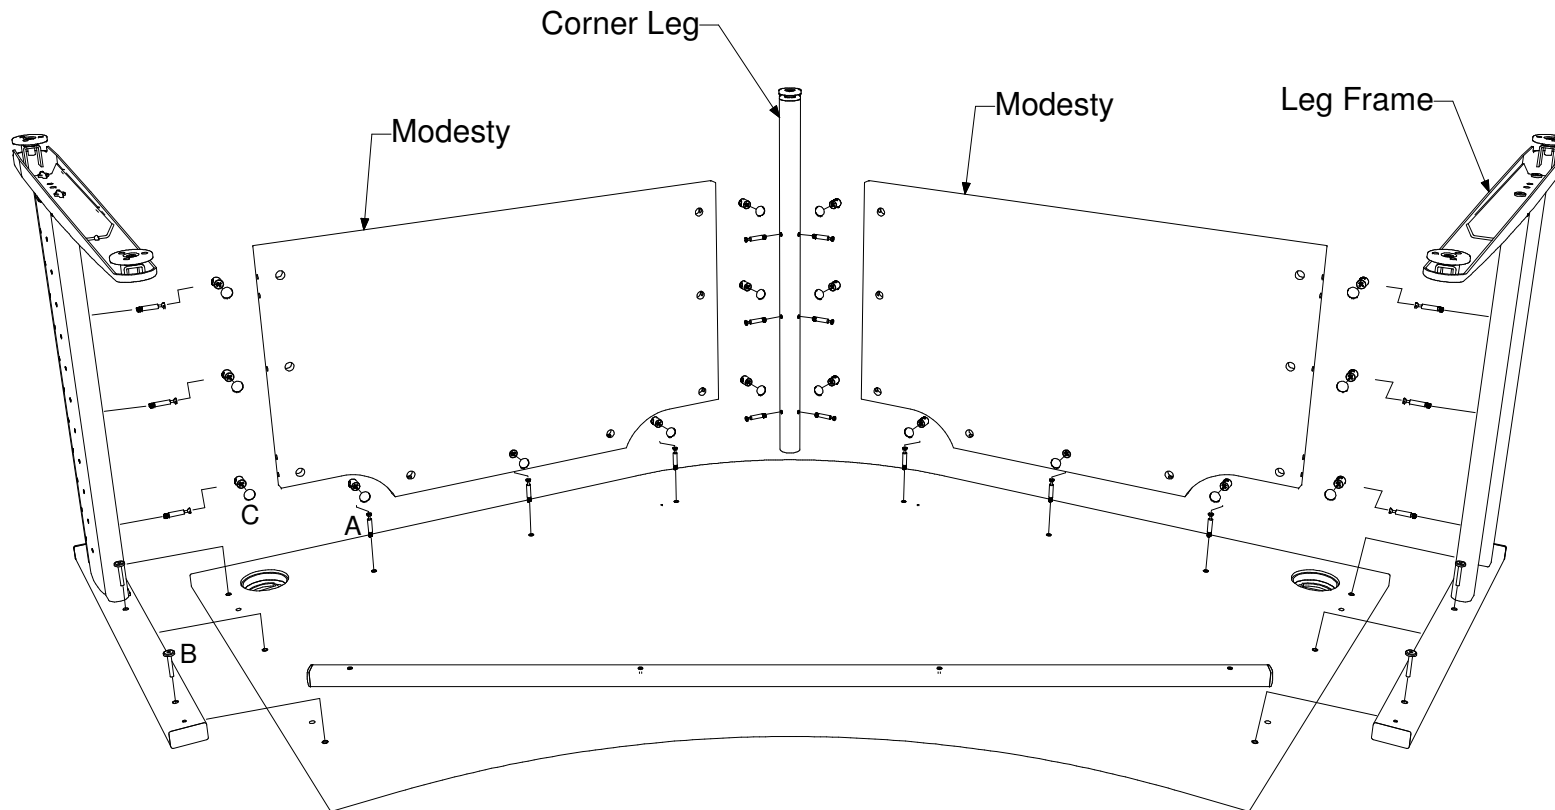


Assembly steps

1. Place the top upside down. Screw six Part A into the top (for modesty panel attachment).
2. Screw six Part A into the corner leg, connect to one modesty and tighten three minifix cams.
3. Connect the second modesty to the corner leg, and tighten three minifix cams.
4. Lift and locate the attached modesty panels and corner leg onto the six Part A in the top. Do not tighten the six minifix cams.
5. Screw six Part A into the uprights on the two leg frames.
6. Fix the leg frames onto the desk top, locating the three Part A on each leg frame with the three minifix cam holes on each modesty panel. Tighten minifix cams to secure the leg frames to each modesty panel.
7. Screw six Part B through the leg frames into the top.
8. Tighten the six minifix cams in the modesty panels.
9. Push Parts C into the appropriate places to finish the desk.

Fittings supplied




Part A
Minifix bolts M6
Quantity=18



Part B
M6 Flat head bolt
Quantity = 6



Part C
Minifix cover
Quantity=18




Tools required

Pozi head screw driver



Allen key (4mm)

Atmosphere Slab Delta

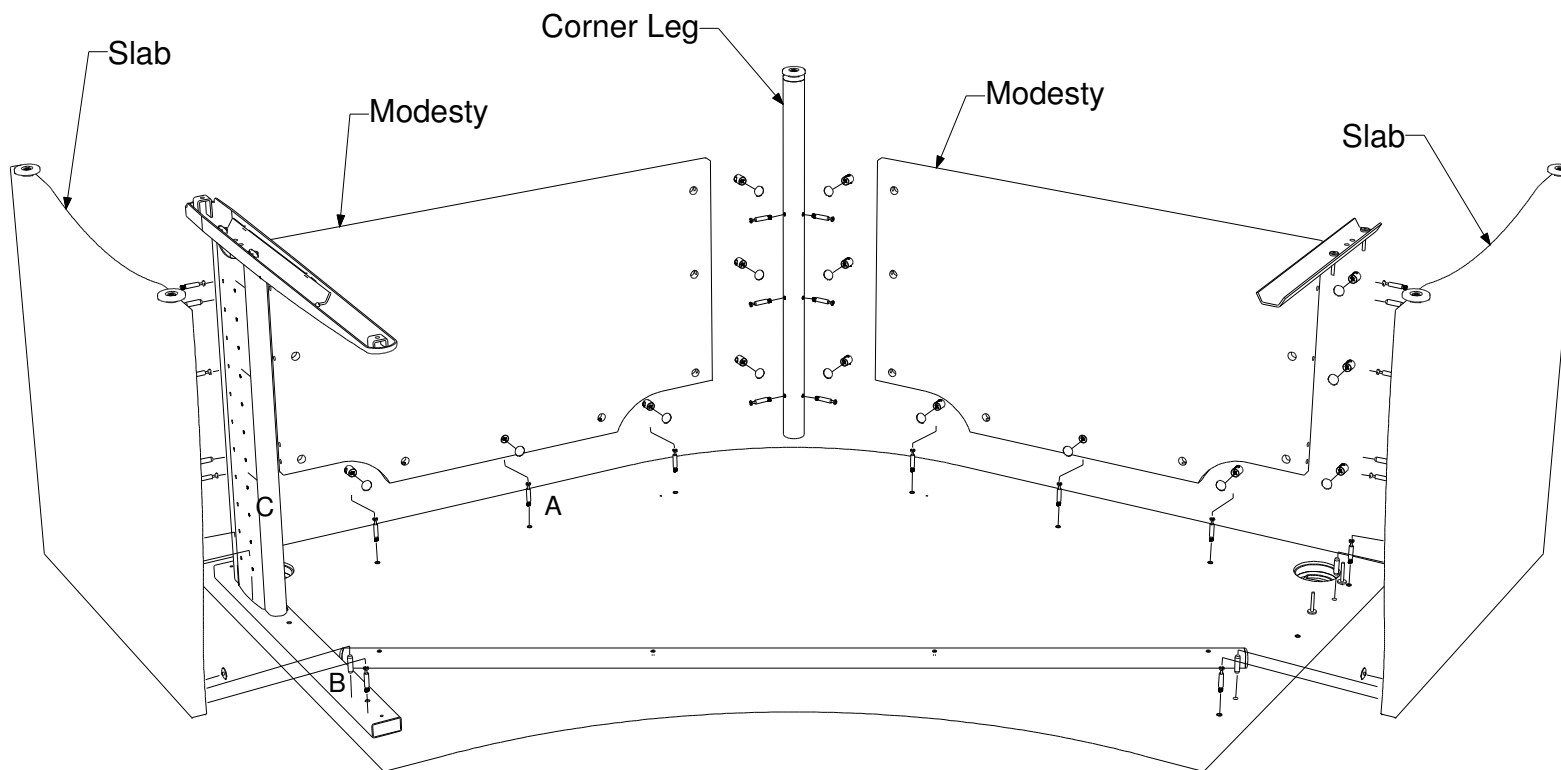

Assembly steps

1. Place the top upside down. Screw six Part A into the top (for modesty panel attachment).
2. Screw six Part A into the corner leg, connect to one modesty and tighten three minifix cams.
3. Connect the second modesty to the corner leg, and tighten three minifix cams.
4. Lift and locate the attached modesty panels and corner leg onto the six Part A in the top. Do not tighten the six minifix cams.
5. Screw six Part A and push four Part B into the top for slab panel attachment.
6. Screw six Part A and push two Part B into the appropriate holes on the slabs to locate with modesty panels.
7. To add the Slab panel, lift the modesty slightly and locate three Part A on one slab leg with the appropriate holes on one end of the modesty panel. Then lower the both the slab and modesty panel onto the two Part A/Part B in the top. Repeat this process for the other slab panel.
8. Tighten the nine minifix cams in the modesty panels and the two in each slab panel.
9. Push Parts C into the appropriate places to finish the desk.

Fittings supplied



Part A
Minifix bolts M6
Quantity=22



Part B
Wood Dowels
Quantity = 8



Part C
Minifix cover
Quantity=22

Tools required



Pozi head screw driver