

Important Information

Safety Guide

- Apply manual handling guidelines when building this item.
- Only use component fixings supplied with this item.

Recommendations

Screens

If required, centre screens can be added once the Bench desk is complete.


Levelling the Bench desk

It is important to adjust the feet at the start and finalise at the end to ensure the product is level. To do this simply use a 12mm Spanner to adjust the feet to the appropriate height. See step 6.

Contract Bench Assembly Instructions

1. Compile Set 1 (S1) and Set 2 (S2) screws, using parts A, B, C, and D. These sets are required to fit the frame together.
2. Holding both end frames upright, slot the centre crossrails in place to connect the two end frames. Use S1 to loosely secure these in place.
DO NOT fully tighten at this stage.
3. Place the outer crossrails into position using S2 screws. Finally add S1 screws and fully tighten all S1 and S2 screws.

Continue overleaf

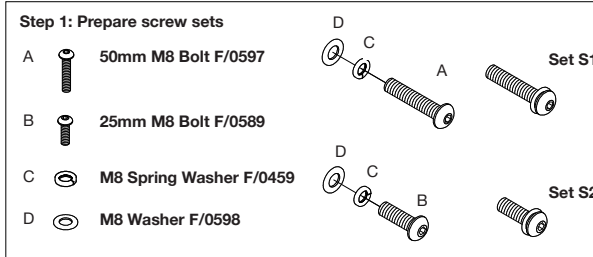


Parts Required


- | | | | | | |
|---|--|---|---|--|---|
| A | | M8 x 50mm Skt Button BZP
Code: F/0597 Quantity = 12 | E | | Glider Buffer
Code: F/0606 Quantity = 16 |
| B | | M8 x 25mm Skt Button BZP
Code: F/0589 Quantity = 4 | F | | 5.0 x 45mm Counter Sunk
Code: F/0587 Quantity = 8 |
| C | | M8 x Contact Spring Washer
Code: F/0459 Quantity = 16 | G | | 5.0 x 70mm Pan Head BZP
Code: F/0591 Quantity = 8 |
| D | | M8 Plain Washer BZP 8mm x 17 x 1.6
Code: F/0598 Quantity = 16 | H | | 5mm Allen Key
Quantity = 1 |

Tools needed

- Spanner 12mm**
Quantity = 1
- Pozi Head Screwdriver**
Quantity = 1

- 5mm Allen Key**
Quantity = 1

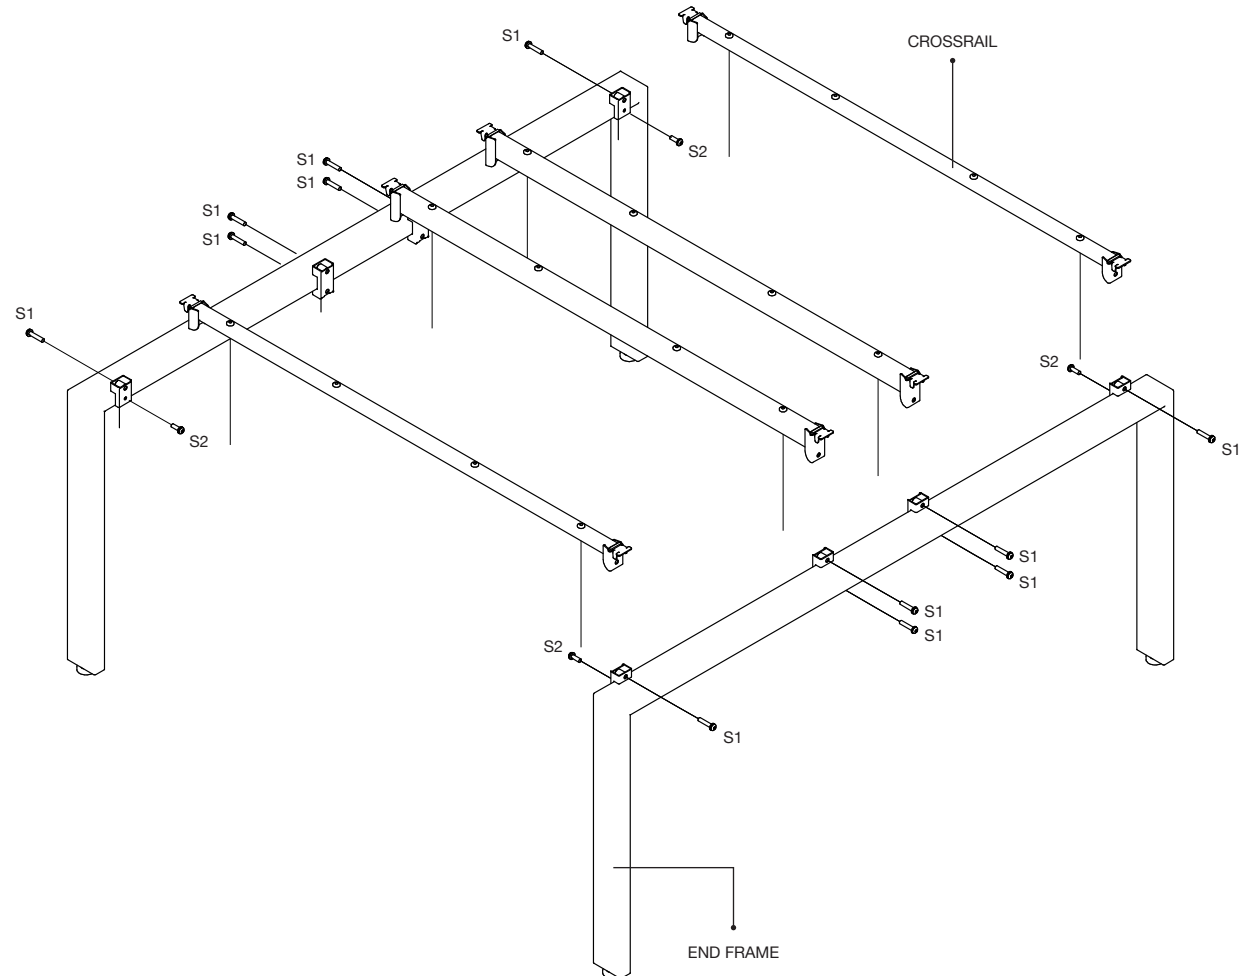

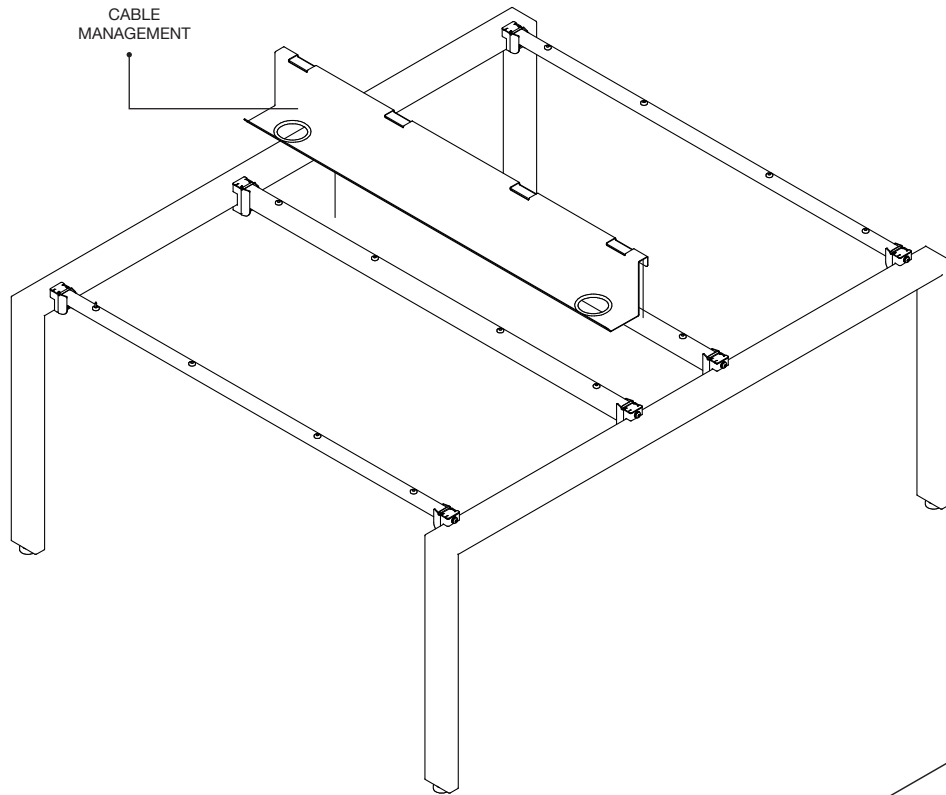

4. Place Glide Buffers, part **E**, into the holes on the top of the crossrails.
OPTIONAL Take the cable management and slot onto the centre crossrail.
5. Place one top on to the frame at a time and screw into place first using part **F** at the front of the desk and then part **G** at the rear of the desk.
6. **WARNING** At this point it is important to adjust the feet to ensure the product is level. To do this simply use a 12mm Spanner to adjust the feet to the appropriate height.
7. The Contract Bench desk is now complete.

