










ASSEMBLY INSTRUCTIONS

RANGE	SmartTop	
REF:	Single Desk	
	 Read this leaflet before assembly	 2 People Required



COMPONENT PARTS

 Item A 60mm Chipfast Bolt NP F/0486 Qty 4	 Item B Minifix Bolt M6 F/0433 Qty 4	 Item C Wood Dowel F/0431 Qty 2	 Item D Minifix Alloy Cams 18mm F/0434 Qty 4	 Item E Adjustable Foot Black F/0606 Qty 4
 Item F Minifix Cover Cap F/0545 Qty 4	 Item G Hole Plugs Grey 5mm A/0585 Qty 4			

TOOLS REQUIRED

- Pozi head screwdriver
Minimum 200mm long
- T30 Allen Key (**Supplied**)
- 5mm Allen Key

BEFORE YOU BEGIN...

- Check you have all the tools and components required
- Keep children and animals away from small parts
- Ensure you have adequate space
- Assemble product on a flat, clean surface
- Apply manual handling guidelines when building this item

IMPORTANT:

- Cables for the monitor and keyboard must not impede, or interfere with, the gas assisted strut as this could damage the mechanism. Please ensure you use the cable clamps provided.

Please check the below details before attaching computer hardware:

- The maximum monitor size is 19 inches (486.2mm).
- Keyboard maximum dimensions 475mm wide x 40mm depth
- The overall weight of the complete item is 35kgs, apply manual handling guidelines.
- Only use component fixings supplied with this item.
- When closing monitor lid place hand in centre of the top to prevent trapping fingers or thumb and press down until lid contacts latch.

ASSEMBLY INSTRUCTIONS

STEP 1

Place top on a flat even surface.
Place part (C) in appropriate holes in modesty panel.

STEP 4

Screw part (B) into the holes of the upright on the cantilever legs and attach part (E) to bottom of cantilevers.

STEP 7

Apply part (F), cover cap, over part (D).

STEP 2

Push part (D) (with the arrows facing out) into the holes of the modesty. (Ensuring the holes are free from debris)

STEP 5

Attach cantilever legs to modesty placing parts (B) into the holes on the modesty.

STEP 8

Attach monitor using screws provided by monitor supplier. (Take time to review which holes you need to use which is dependent on monitor size.)

STEP 3

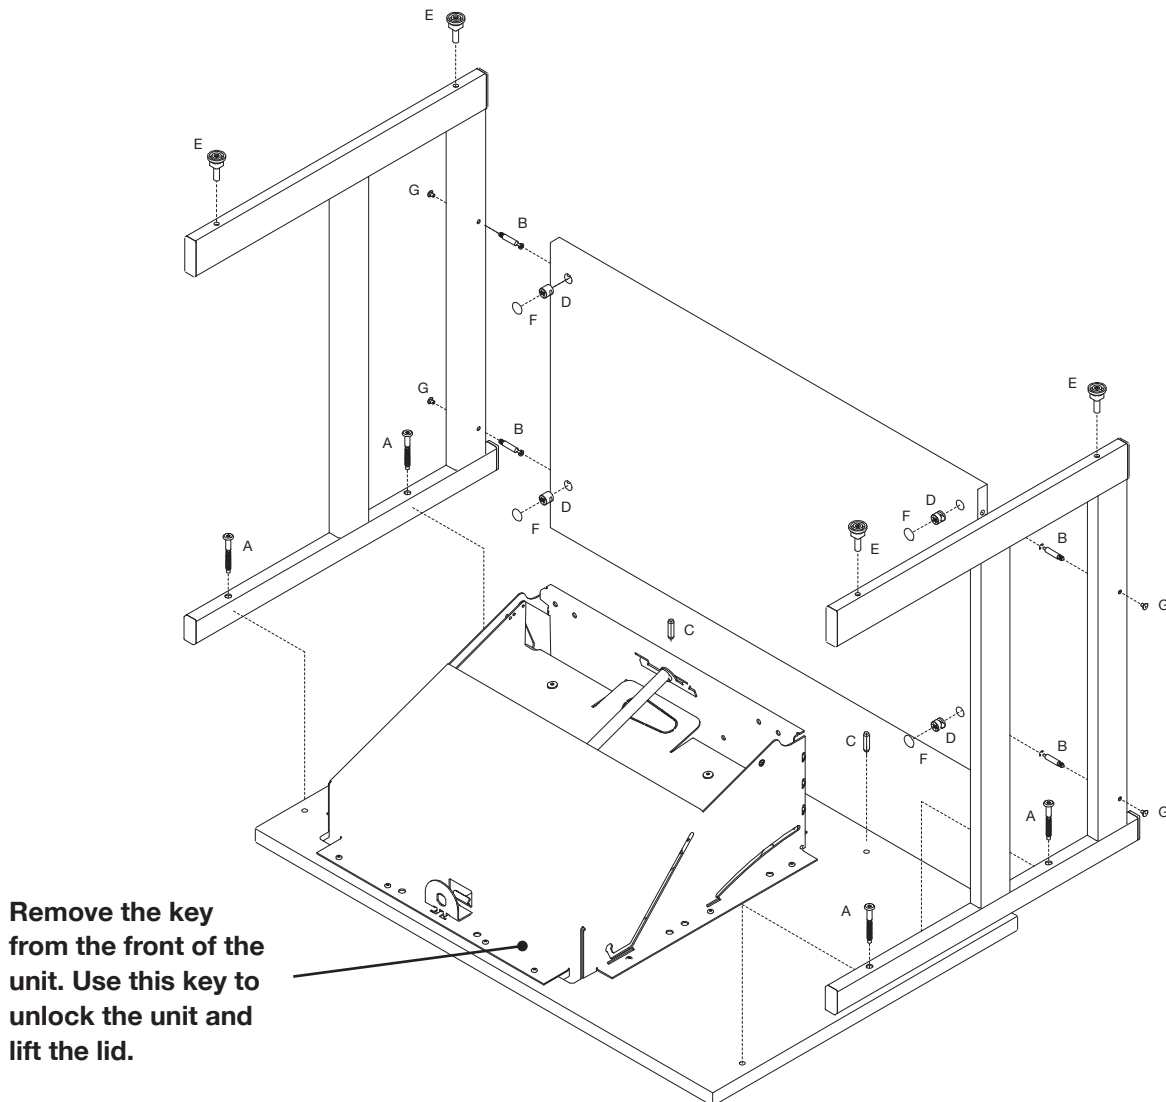
Take the modesty and lower into the top. Ensuring the holes are lined up.

STEP 6

Screw part (A) through cantilever top rail into the holes in the top. Tighten up parts (D) in modesty.

STEP 9

Apply part (G), hole plugs, to outside of cantilever leg frame.



CARE AND MAINTENANCE

Clean using a damp cloth and mild detergent – do not use abrasive cleaners or bleach.