












## ASSEMBLY INSTRUCTIONS

RANGE	SmartTop	
REF:	Double Desk	
	 Read this leaflet before assembly	 2 People Required



## COMPONENT PARTS

 <b>Item A</b> 60mm Chipfast Bolt NP F/0486 Qty 6	 <b>Item B</b> Minifix Bolt M6 F/0433 Qty 8	 <b>Item C</b> Wood Dowel F/0431 Qty 4	 <b>Item D</b> Minifix Alloy Cams 18mm F/0434 Qty 8	 <b>Item E</b> Adjustable Foot Black F/0606 Qty 6
 <b>Item F</b> Minifix Cover Cap F/0545 Qty 8	 <b>Item G</b> Hole Plugs Grey 5mm A/0585 Qty 4			

## TOOLS REQUIRED

- Pozi head screwdriver  
*Minimum 200mm long*
- T30 Allen Key (**Supplied**)
- 5mm Allen Key

## BEFORE YOU BEGIN...

- Check you have all the tools and components required
- Keep children and animals away from small parts
- Ensure you have adequate space
- Assemble product on a flat, clean surface
- Apply manual handling guidelines when building this item

## IMPORTANT:

- Cables for the monitor and keyboard must not impede, or interfere with, the gas assisted strut as this could damage the mechanism. Please ensure you use the cable clamps provided.

### Please check the below details before attaching computer hardware:

- The maximum monitor size is 19 inches (486.2mm).
- Keyboard maximum dimensions 475mm wide x 40mm depth
- The overall weight of the complete item is 35kgs, apply manual handling guidelines.
- Only use component fixings supplied with this item.
- When closing monitor lid place hand in centre of the top to prevent trapping fingers or thumb and press down until lid contacts latch.

# ASSEMBLY INSTRUCTIONS

## STEP 1

Place top on a flat even surface. Place part (C) in appropriate holes in modesty panel.

## STEP 5

Take the modesty panels and lower into the top. Ensuring the holes are lined up.

## STEP 9

Screw part (A) through cantilever top rail into the holes in the top. Tighten up the remainder of parts (D) in modesty.

## STEP 2

Push part (D) (with the arrows facing out) into the holes of the modesty panel. (Ensuring the holes are free from debris).

## STEP 6

Screw the remainder of part (B) into the holes of the upright on the cantilever legs to create a left and right hand fitting.

## STEP 10

Attach monitor using screws provided by monitor supplier. (Take time to review which holes you need to use which is dependent on monitor size.)

## STEP 3

Screw in 4 x Part (B), M6 minifix bolts, into the central cantilever leg.

## STEP 7

Attach part (E) to bottom of the cantilevers.

## STEP 11

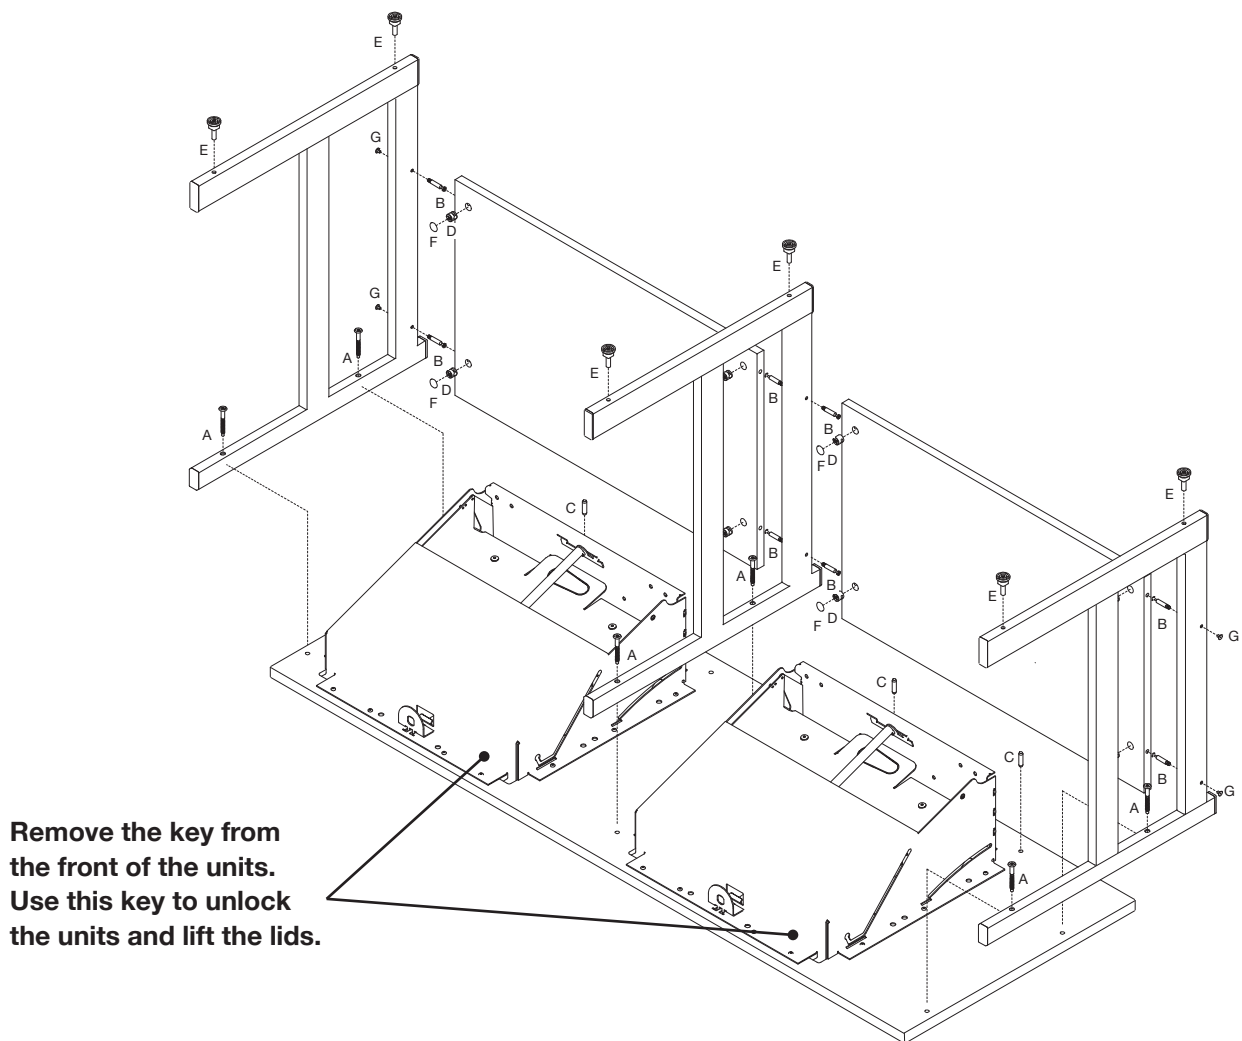
Apply part (G), hole plugs, to outside of cantilever leg frame.

## STEP 4

Attach Modesty panel x 2 to the central cantilever leg.

## STEP 8

Attach cantilever legs to modesty locating parts (B) into the holes on the modesty.



# CARE AND MAINTENANCE

Clean using a damp cloth and mild detergent – do not use abrasive cleaners or bleach.