











ASSEMBLY INSTRUCTIONS

RANGE	StudyHub Study Carrell and Extension Bay	
REF:	800 and 1000mm Wide	
	 Read this leaflet before assembly	 2 People Required



FIXINGS

 <b>Item 1</b> Minifix Chipfast Bolt Qty 14 F/0532	 <b>Item 2</b> Minifix Cams Qty 6 F/0434	 <b>Item 3</b> Minifix Cams Qty 8 F/0467	 <b>Item 4</b> Pozi Panhead Screws Qty 6 F/0511	 <b>Item 5</b> StudyHub Feet Qty 4 M/0253	 <b>Item 6</b> Cover Caps Qty 14 F.0436 F.0446 F.0545 F.0575
---	---	---	--	--	---

TOOLS REQUIRED

- Pozi head screwdriver

BEFORE YOU BEGIN...

- Check you have all the tools and components required
- Keep children and animals away from small parts
- Ensure you have adequate space
- Assemble product on a flat, clean surface
- Apply manual handling guidelines when building this item


ASSEMBLY INSTRUCTIONS

STEP 1

Lay the Back Panel on a soft, non-abrasive surface and screw two Minifix Chipfast Bolts (1) into the pre-drilled holes where the Desktop will be positioned.

Insert six Cams (2) into the back panel as shown.

Insert eight Cams (3) into the Desktop itself.

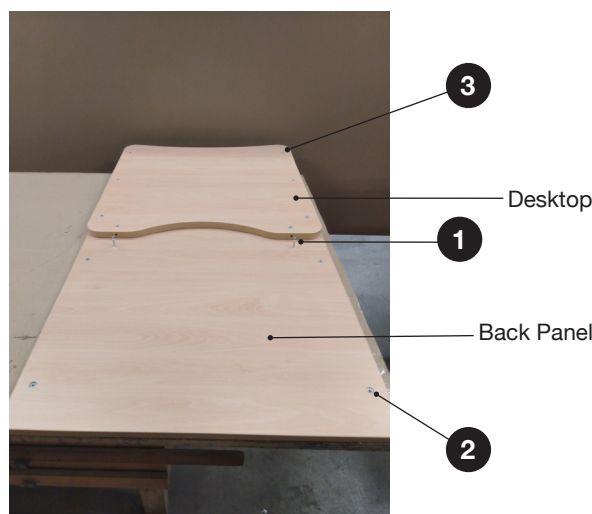

## ASSEMBLY INSTRUCTIONS


### STEP 2

Lift the Desktop directly onto the two Minifix Chipfast Bolts **(1)**. Tighten the Cams **(2)** to secure it in position.




### STEP 3

Lay the Side Panels out on a soft, non-abrasive surface and screw six Minifix Chipfast Bolts **(1)** into place on each panel. Lift one Side Panel into position and tighten the Cams then repeat this process with the other Side Panel.

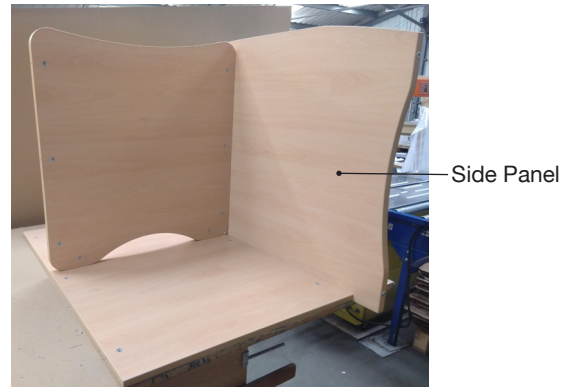


### STEP 4

Screw the Batons into place underneath the left and right hand sides of the work surface using three Pozi Panhead Screws **(4)** apiece.

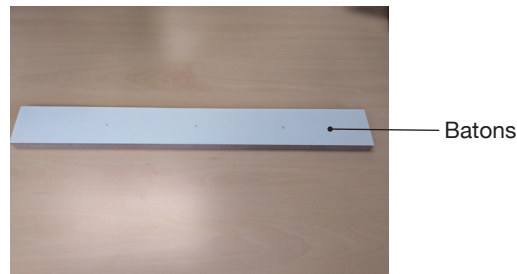

### STEP 5

Screw the Feet **(5)** into place and pop the Cover Caps **(6)** on where required. Using two people, carefully lift the completed unit into a standing position.

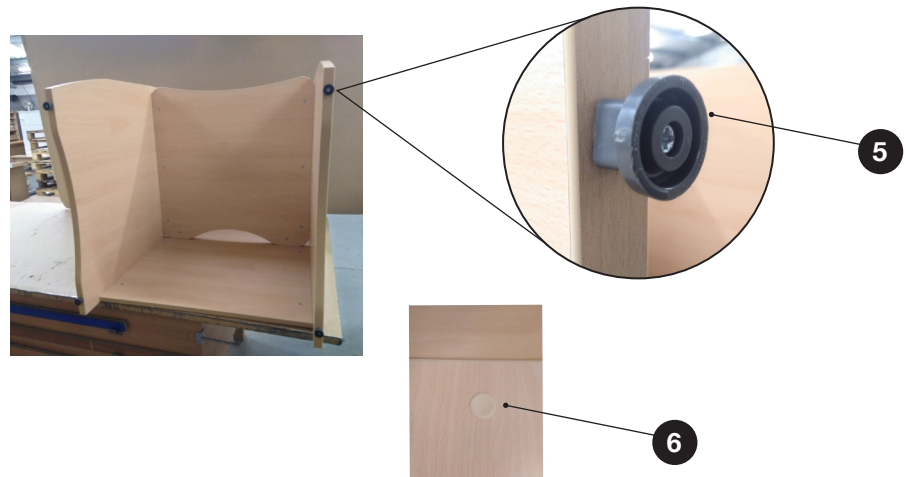

## CARE AND MAINTENANCE

Clean using a damp cloth and mild detergent – do not use abrasive cleaners or bleach.